## **PRECAUTIONS**

Take care to observe the following precautions when performing inspections or removal and replacement of body electrical related parts.

## 1. SUPPLEMENTAL RESTRAINT SYSTEM

- Work must be started approx. 90 seconds after the ignition is set to the Lock position and the negative (–) terminal cable is disconnected from the battery. (See page RS–2)
- When disconnecting any of the connectors in the supplemental restraint system, be sure to Lock
  the ignition switch and disconnect the battery positive negative (–) terminal first. Since the
  connectors are twin lock type connectors, disconnect the connectors only after releasing the first
  stage lock.
- When connecting supplemental restraint system connectors, be sure to lock them securely. (If the connectors are not locked securely, the system may not operate when needed.)
- Always store the steering wheel pad with the pad surface facing upward. (Storing the pad with its metallic surface up may lead to a serious accident if the air bag inflates for some reason.)
- When installing the spiral cable, be sure the vehicle is in the straight ahead condition and confirm that the spiral cable is in the neutral position when it is installed.
- INFORMATION LABELS (NOTICE) are attached to the periphery of the air bag components. Follow the NOTICE.

## 2. AUDIO SYSTEM

- If the battery negative (–) terminal is disconnected, the preset AM, FM 1 and FM 2 stations stored in memory are erased, so be sure to note the stations and reset them after the battery terminal is reconnected.
- If the battery negative (–) terminal is disconnected, the "ANTI-THEFT SYSTEM" will operate when the terminal is reconnected, but the radio, tape player and CD player will not operate. Be sure to input the correct ID number so that the radio, tape player and CD player can be operated again.

## 3. ELECTRICAL PARTS

• Before removing and inspecting the electrical parts, set the ignition switch to the LOCK position and disconnect the negative terminal cable from the battery.

CAUTION: Work must not be started until after at least 90 seconds or longer from the time the negative (–) terminal cable is disconnected.