

REAR SUSPENSION (4WD) COMPONENTS

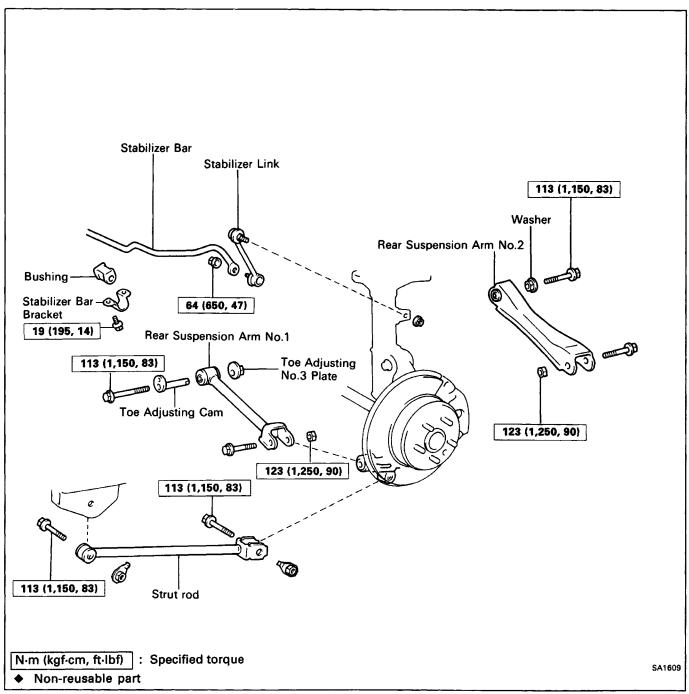

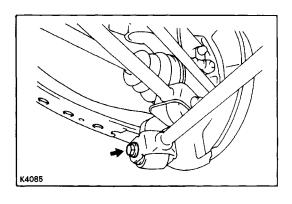

Rear Shock Absorber

(See page SA-113)

Strut Rod and Suspension Arm REMOVAL OF STRUT ROD AND SUSPENSION ARM

- 1. REMOVE REAR WHEELS
- 2. REMOVE STRUT ROD
- (a) Remove the bolt and nut from the axle carrier.