TROUBLESHOOTING

parts. You will find the troubles easier using the table well shown below. In this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these

	 				·-	
	Jumps out of gear	Hard to shift or will not shift	Oil leakage	Noise	Parts Name Trouble	See Page
				-	Oil (Level low)	-
				2	Oil (Wrong)	MX-2
					Oil (Level too high)	-
			2		Gasket (Damaged)	MX-17
			2		Oil seal (Worn or damaged)	MX-17
			ω		O-Ring (Worn or damaged)	MX-17
		-			Control cable (Faulty)	MX-67
					Locking ball spring (Damaged)	MX-17
	N				Shift fork (Worn)	MX-17
	ω			ω	Gear (Worn or damaged)	MX-17
	ω			ω	Bearing (Worn or damaged)	MX-17
		2			Synchronizer ring (Worn or damaged)	MX-30, 37
		ω			Shifting key spring (Damaged)	MX-30, 37
-	 					