


## CLUTCH RELEASE CYLINDER COMPONENTS

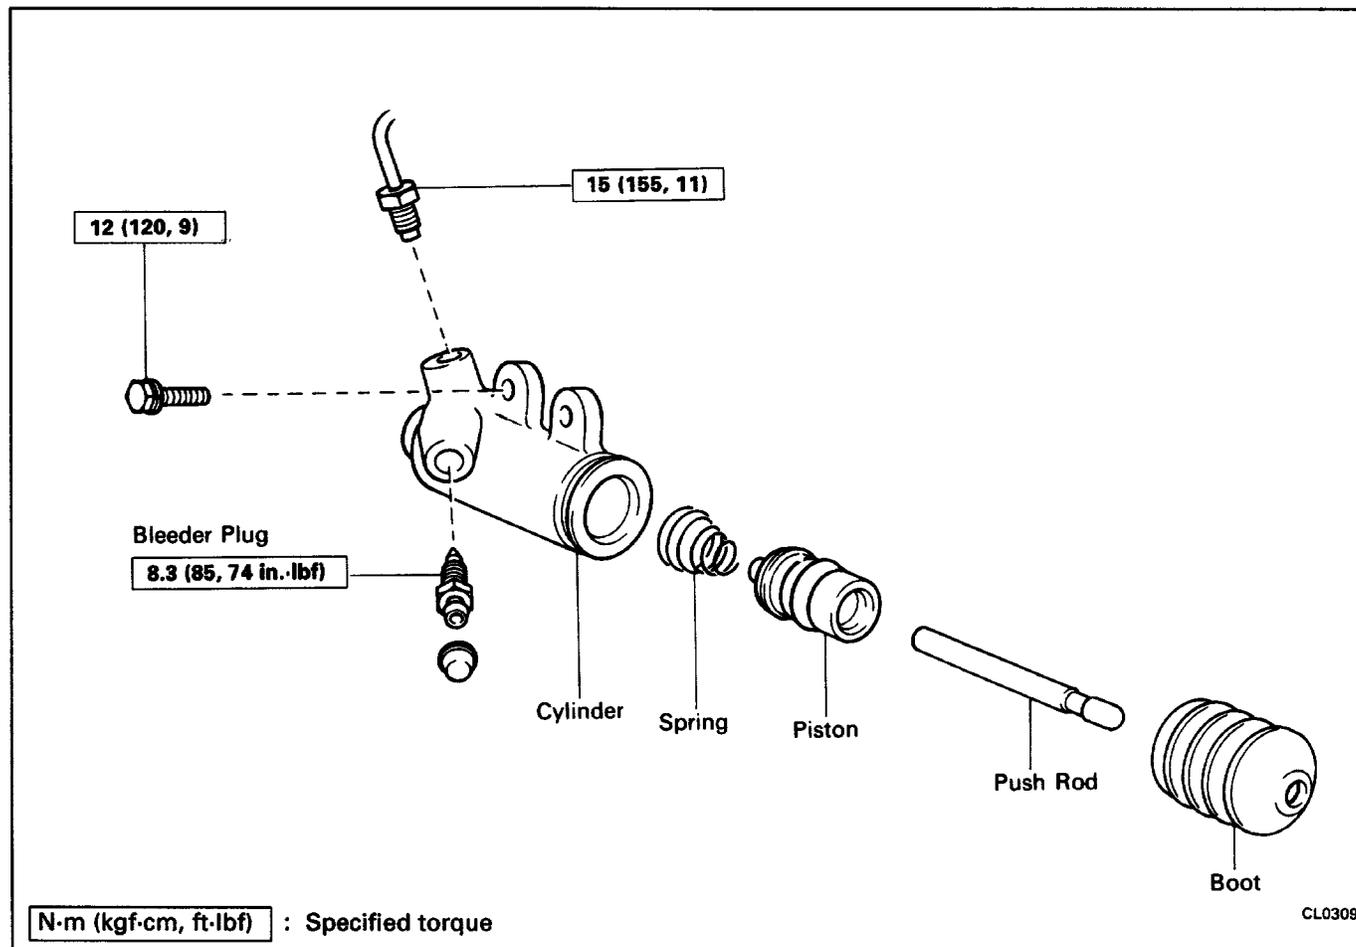

### REMOVAL AND INSTALLATION OF CLUTCH RELEASE CYLINDER (MAIN POINT OF REMOVAL AND INSTALLATION)

#### 1. DISCONNECT AND CONNECT CLUTCH LINE TUBE

Using SST, disconnect and connect the tube.

SST 09751-36011

#### 2. INSPECT RELEASE CYLINDER BORE FOR SCORING OR CORROSION

If a problem is found, clean or replace the cylinder.

#### 3. INSPECT PISTON AND CUPS FOR WEAR, SCORING, CRACKS OR SWELLING

If either one requires replacement, use the parts from the cylinder kit.

#### 4. INSPECT PUSH ROD FOR WEAR OR DAMAGE

If necessary, replace the push rod.

#### 5. COAT PISTON WITH LITHIUM SOAP BASE GLYCOL GREASE AS SHOWN

#### 6. BLEED SYSTEM

(See page [CL-4](#))

