
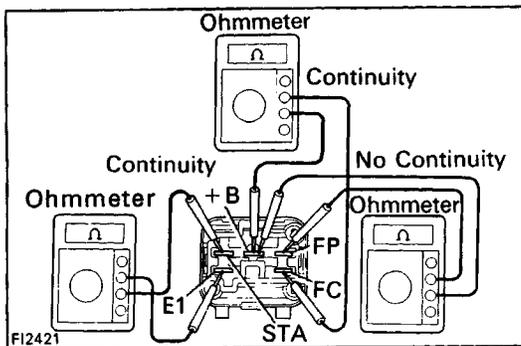


## Circuit Opening Relay (4A-FE and 5S-FE)

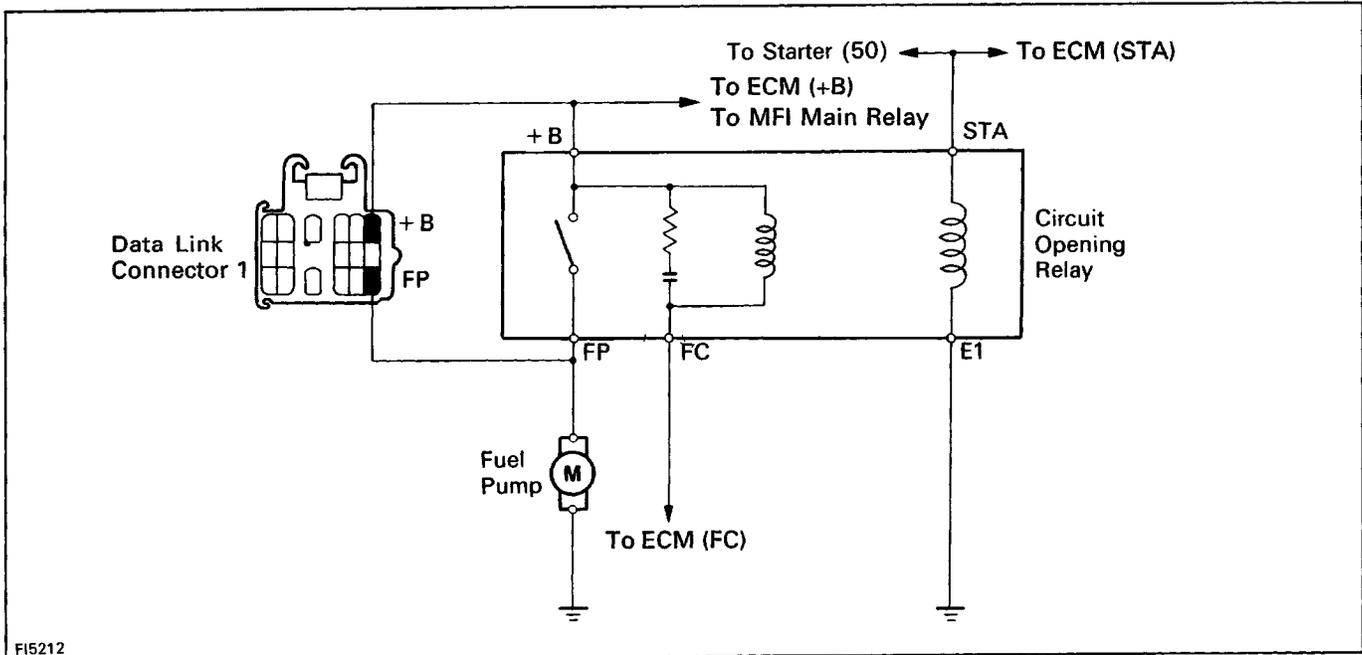


### INSPECTION OF CIRCUIT OPENING RELAY

#### 1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals + B and FC.
- Check that there is no continuity between terminals + B and FP.

If continuity is not as specified, replace the relay.

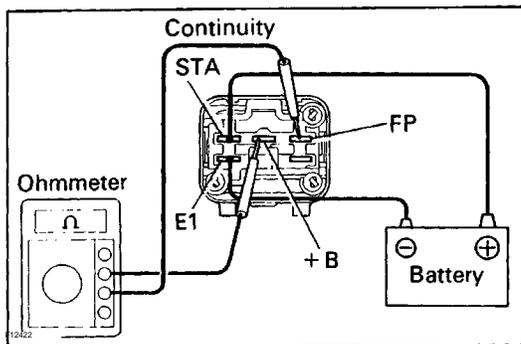

#### 2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals + B and FP.

If operation is not as specified, replace the relay.