



POWER SOURCE PARTS LOCATION

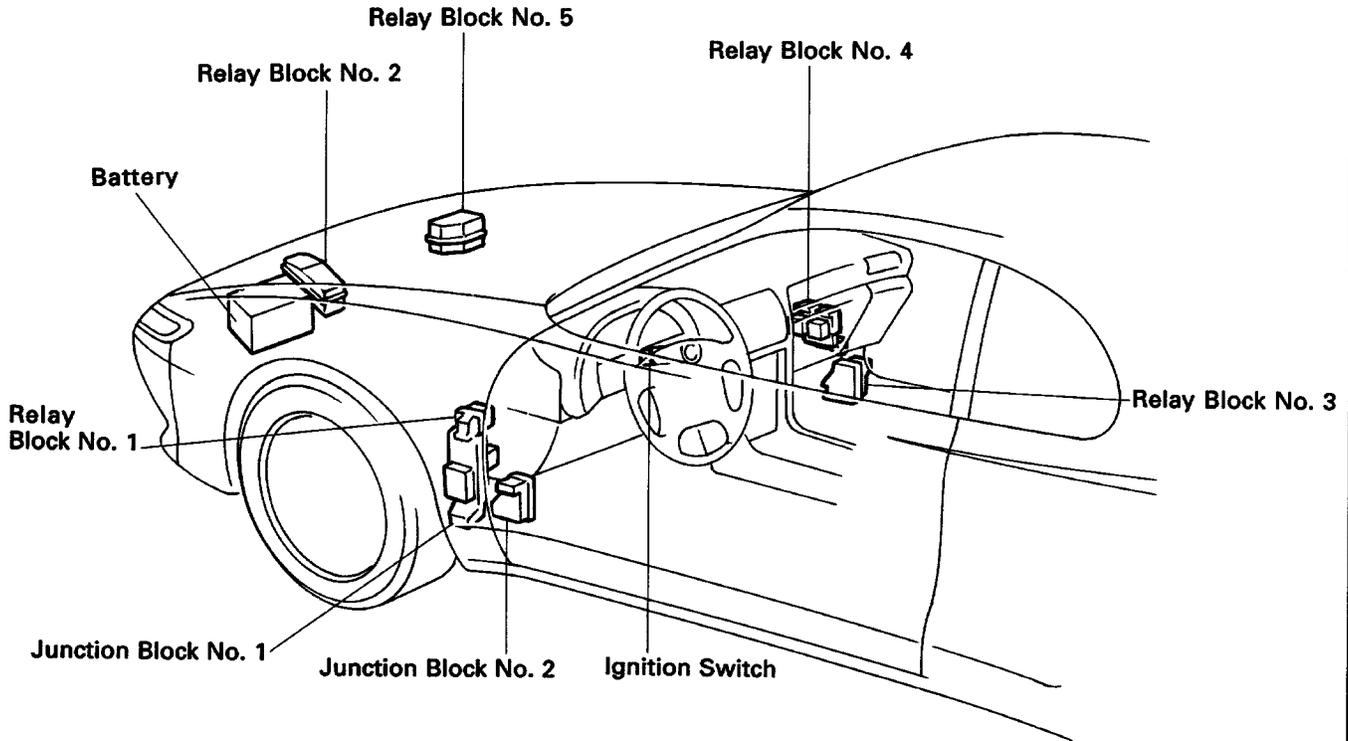

JUNCTION BLOCK NO. 1 AND RELAY BLOCK NO. 1

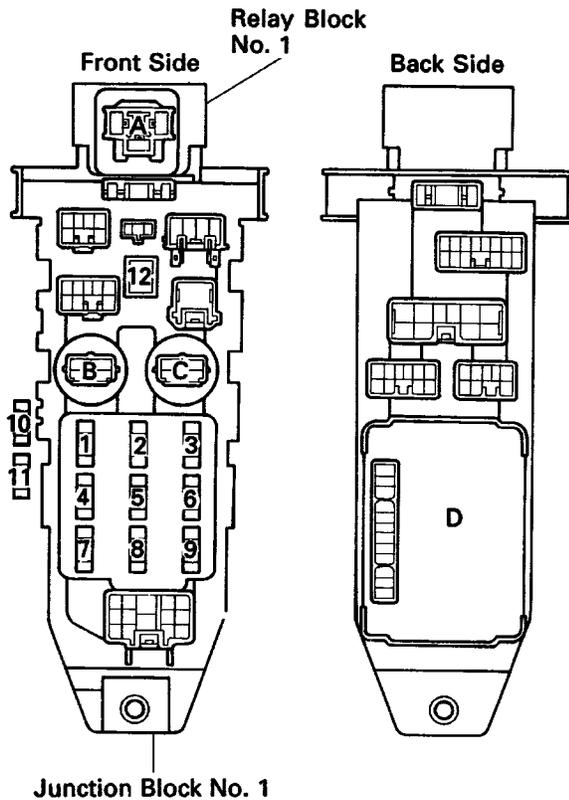


Fuses and Fusible Link

1. IGN	7.5A
2. CIG & RAD	15A
3. STOP	15A
4. GAUGE	15A
5. TURN	10A
6. ECU-IG	15A
7. WIPER	20A
8. ECU-13	15A
9. TAIL	15A
10. -	
11. MIR-HTR	10A
12. DEFOGGER	30A (M-Fuse)

Relays

- A TURN SIGNAL FLASHER
- B DEFOGGER
- C. TAIL (Taillight Control)
- D. INTEGRATION

JUNCTION BLOCK No. 2

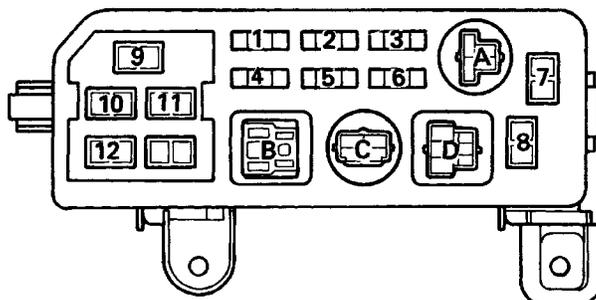

Fuses and Fusible Links


1. HEAD (LH)	15A	7. FAN	30A FL (H-Fuse)
2. RTR	30A	8. CDS	30A FL (H-Fuse)
3. HEAD (RH)	15A	9. ALT	100A FL (H-Fuse)
4. ER	15A	10. AM2	30A FL (H-Fuse)
5. DOME	20A	11. AM1	40A FL (H-Fuse)
6. HAZ-HORN	15A	12. ABS	60A FL (H-Fuse)

Relays

- A. FAN No. 1
- B. HEAD (Headlight Control)
- C. EFI
- D. ENGINE MAIN

RELAY BLOCK NO. 2 and NO. 3

Relay Block No. 2 Relay Block No. 3

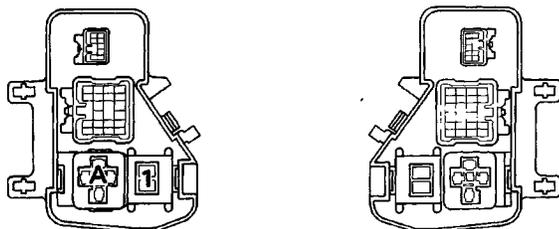


Fuse

- 1. Power 30A (M-Fuse)

Relays

- A. Power Main
- B. Front Fog Light Control

RELAY BLOCK NO. 4

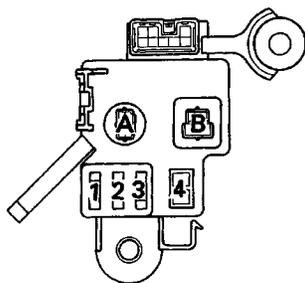


Fuses

- 1. -
- 2. FOG 20A
- 3. A/C 10A
- 4. HEATER 40A (M-FUSE)

RELAYS

- A. STARTER
- B. HEATER MAIN

RELAY BLOCK NO. 5

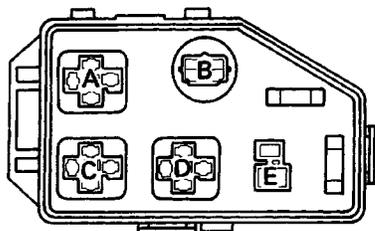

Relays

- A. A/C FAN No. 2
- B. SUB FAN
- C. A/C FAN No. 3
- D. A/C M G
- E. HORN