


## HOOD


### ADJUSTMENT OF HOOD

HINT: Since the centering bolt is used as the hood hinge and lock set bolt, the hood and lock cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

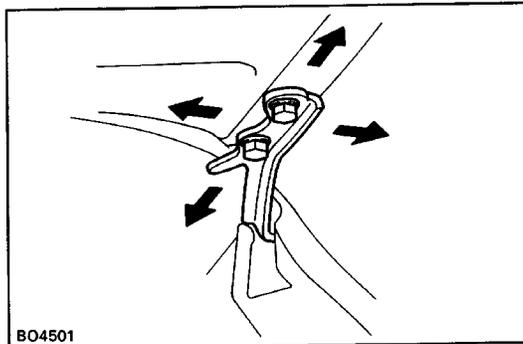


#### 1. ADJUST HOOD IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

Adjust the hood by loosening the hood side hinge bolts.

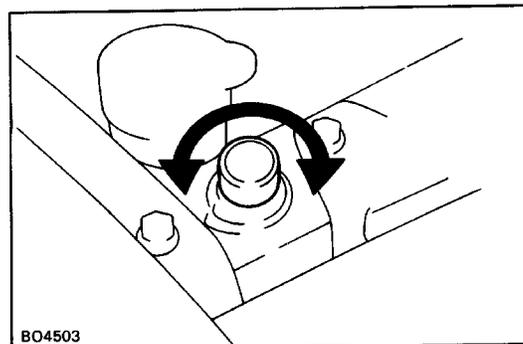


#### 2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

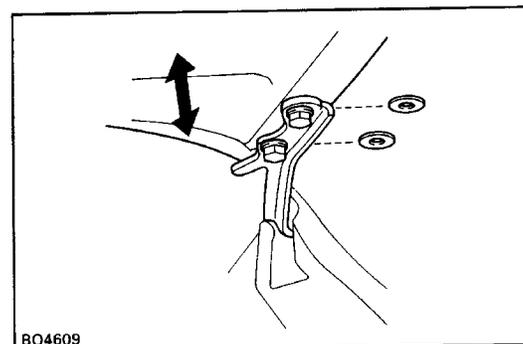

#### 3. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by increasing or decreasing the number of the washers.

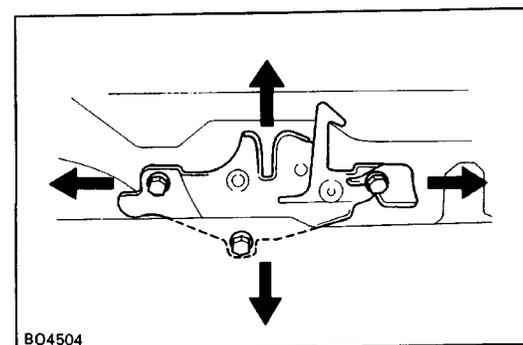

#### 4. ADJUST HOOD LOCK

Adjust the lock by loosening the bolts.