




Engine Coolant Temperature Sensor

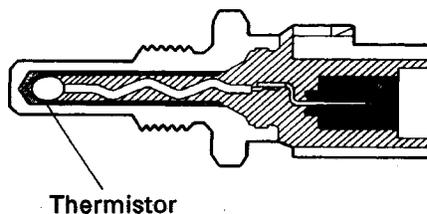


Thermistor

4A-FE

3S-GTE and 5S-FE

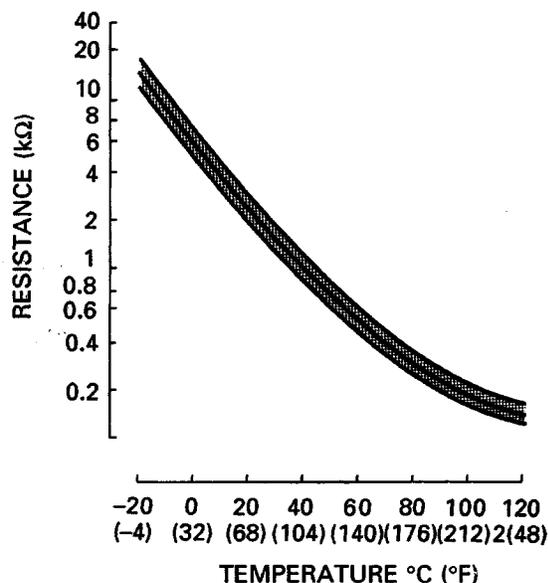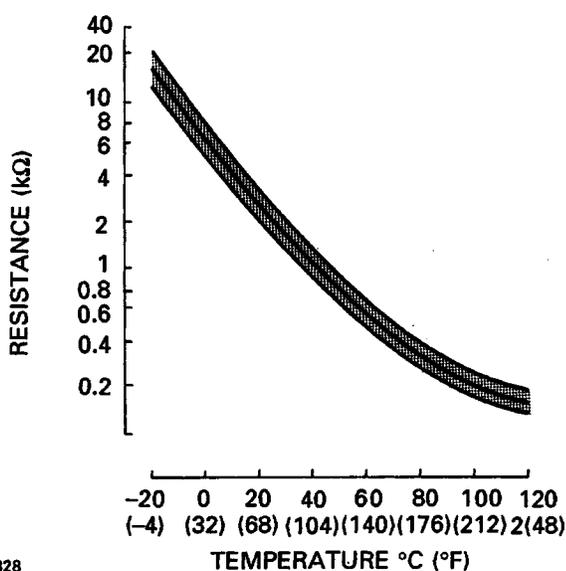

FI3828
P03525 P03524

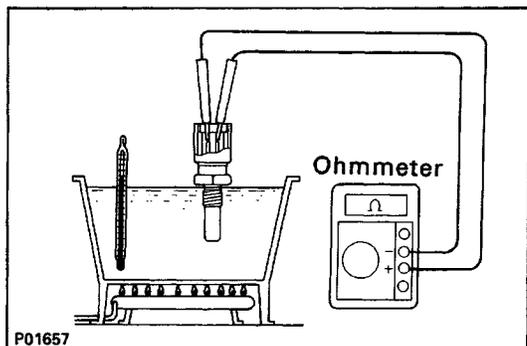

P01657

INSPECTION OF ENGINE COOLANT TEMPERATURE SENSOR

INSPECT RESISTANCE OF ENGINE COOLANT TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart above

If the resistance is not as specified, replace the sensor.