


**2. INSPECT A/C FAN RELAY NO. 2 CONTINUITY**

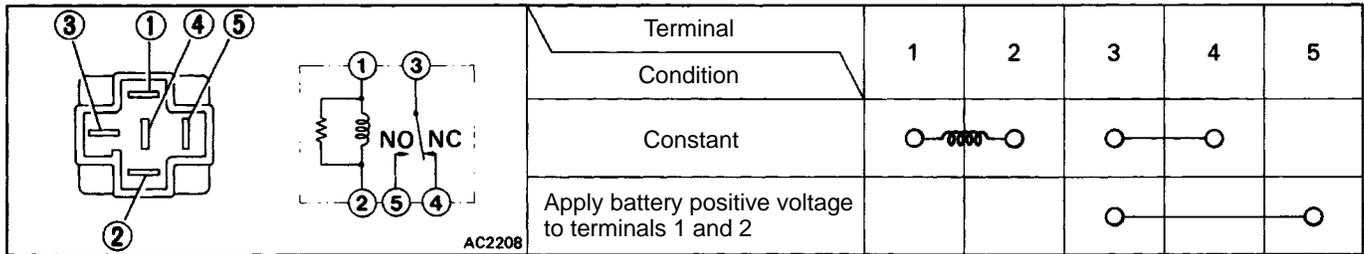

If continuity is not as specified, replace the relay.

**3. INSPECT A/C FAN RELAY NO. 3 CONTINUITY**


See Magnetic Clutch Relay on page AC-43.

**4. INSPECT ENGINE MAIN RELAY**

See Heater Main Relay on page AC-43.

**SWITCHES**


**INSPECTION OF PRESSURE SWITCH**

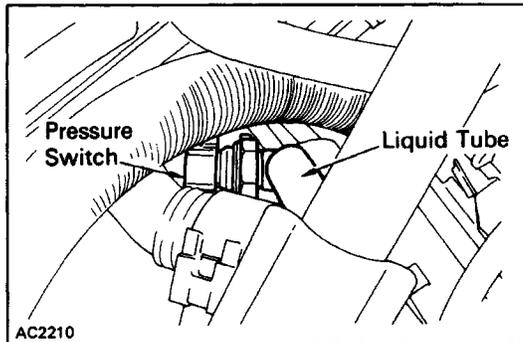

**1. DISCONNECT CONNECTOR OF PRESSURE SWITCH**

**2. INSPECT PRESSURE SWITCH**

- (a) Install the manifold gauge set.
- (b) Observe the gauge reading.
- (c) Check the continuity between two terminals of pressure switch shown in the below.

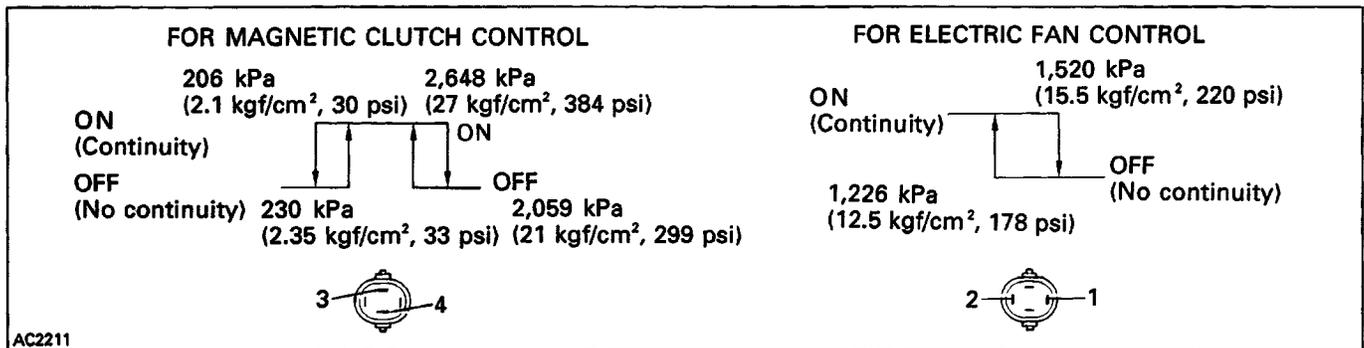

**INSPECTION OF A/C ENGINE COOLANT TEMPERATURE SWITCH**

**1. DISCONNECT CONNECTOR OF A/C ENGINE COOLANT TEMPERATURE SWITCH**

**2. INSPECT A/C ENGINE COOLANT TEMPERATURE SWITCH**

Check the continuity between terminal of the temperature switch and ground.

