



Circuit Opening Relay (3S-GTE)

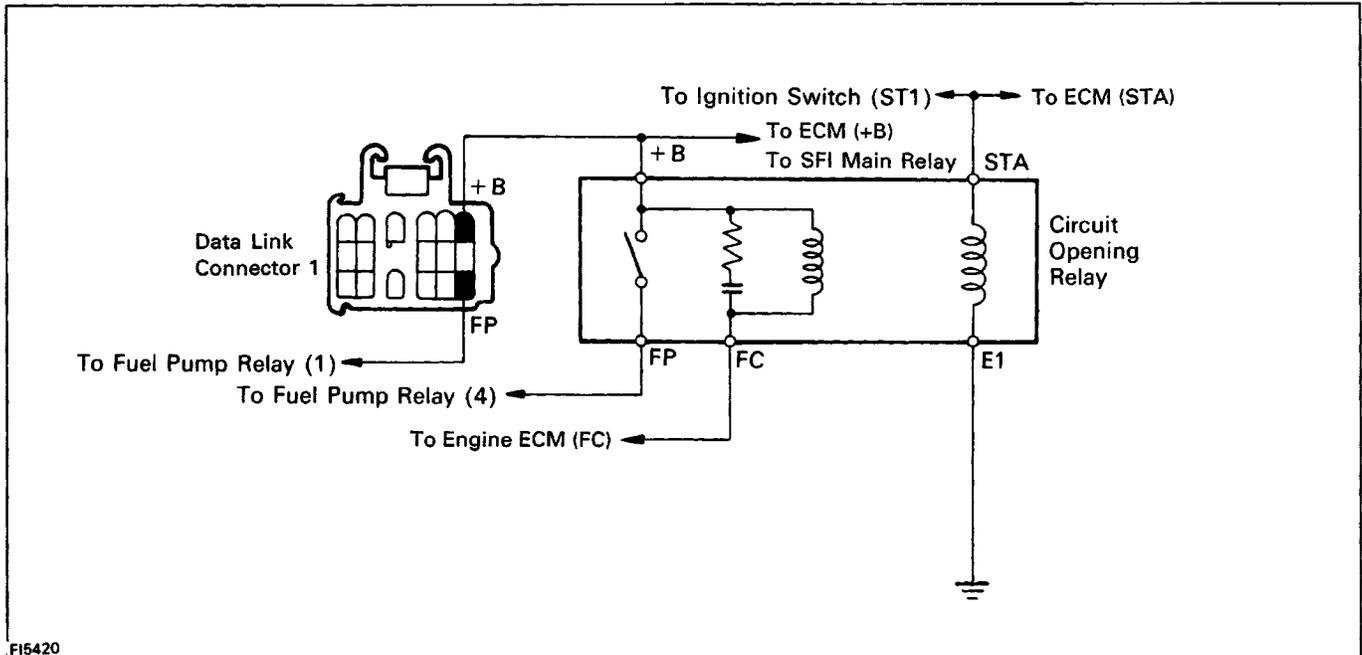

FI5420

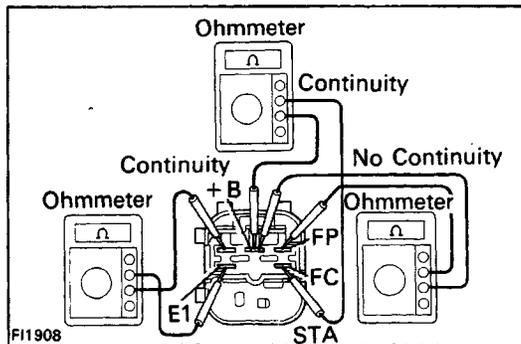


FI1908

INSPECTION OF CIRCUIT OPENING RELAY

1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals STA and E1.
- (b) Check that there is continuity between terminals + B and FC.
- (c) Check that there is no continuity between terminals + B and FP.

If continuity is not as specified, replace the relay.

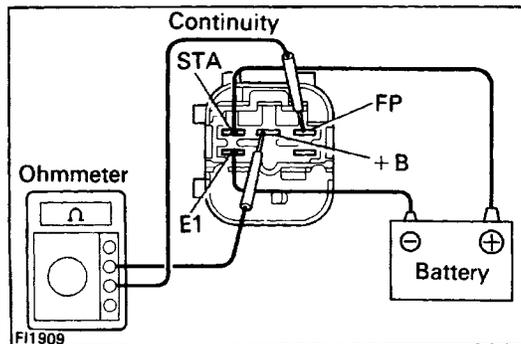

FI1909

2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals STA and E1.
 - (b) Using an ohmmeter, check that there is continuity between terminals + B and FP.
- If operation is not as specified, replace the relay.