


STARTER RELAY (M/T only)


INSPECTION OF STARTER RELAY

LOCATION: In the right kick panel.

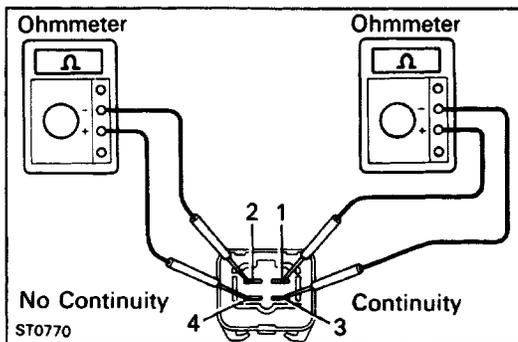

1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
 - (b) Check that there is no continuity between terminals 2 and 4.
- If continuity is not as specified, replace the relay.

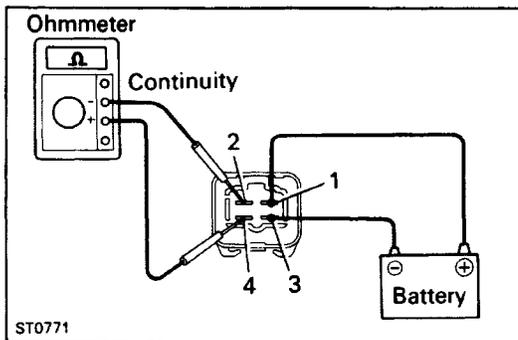

2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 3.
 - (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.
- If operation is not as specified, replace the relay.

CLUTCH START SWITCH (M/T only)

(See page [CL-5](#))