



# BACK DOOR (Liftback) COMPONENTS

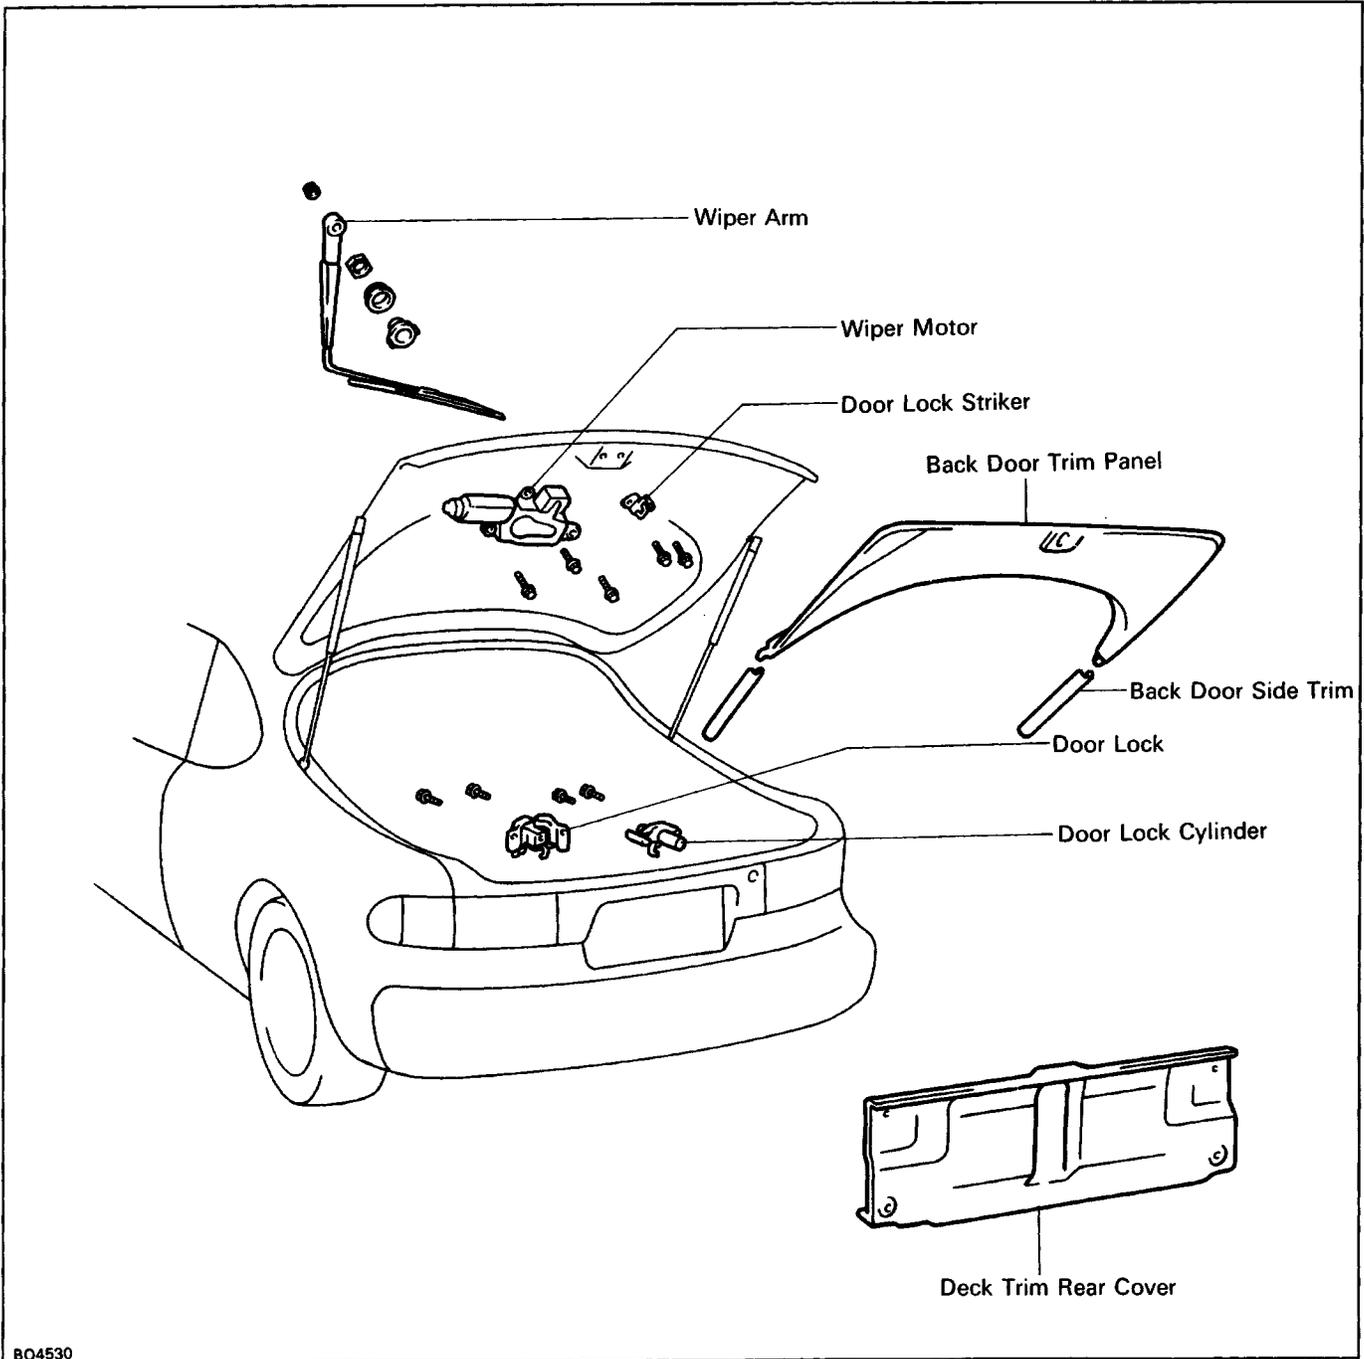

BO4530

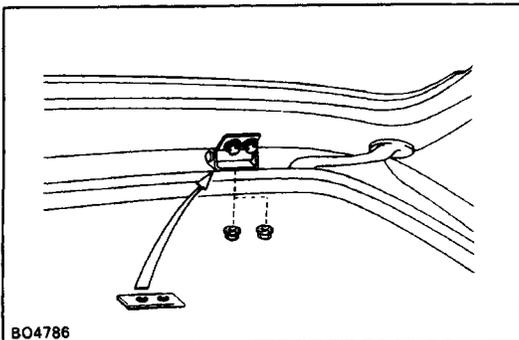

BO4786


## ADJUSTMENT OF BACK DOOR

1. **ADJUST DOOR IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS**

Adjust the door by loosening the hinge bolts.


2. **ADJUST DOOR IN VERTICAL DIRECTION**

Adjust the door by increasing or decreasing the number of the shims.

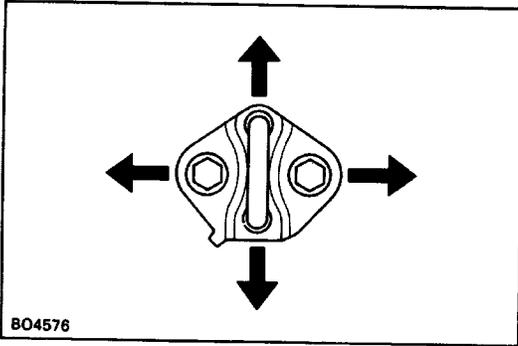


### 3. ADJUST DOOR LOCK STRIKER

- (a) Loosen the mounting bolts to adjust the lock striker.
- (b) Using a plastic hammer, tap the striker to adjust it.

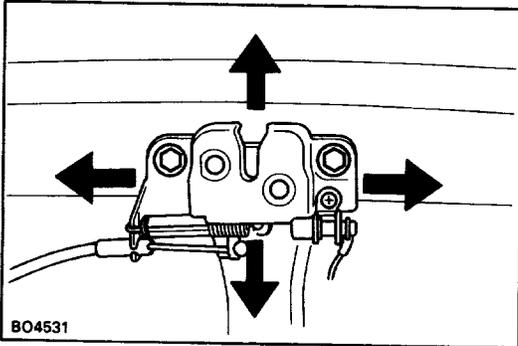

### 4. ADJUST LOCK

- (a) Adjust the lock position by slightly loosening the lock mounting screws, and hitting the lock with a plastic hammer.
- (b) Tighten the lock mounting screws again.

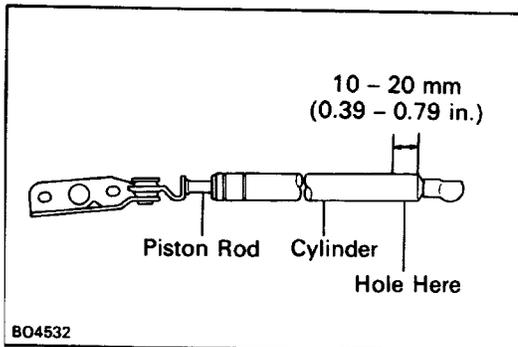

## Back Door Damper Stay

(See page [BO-18](#))