
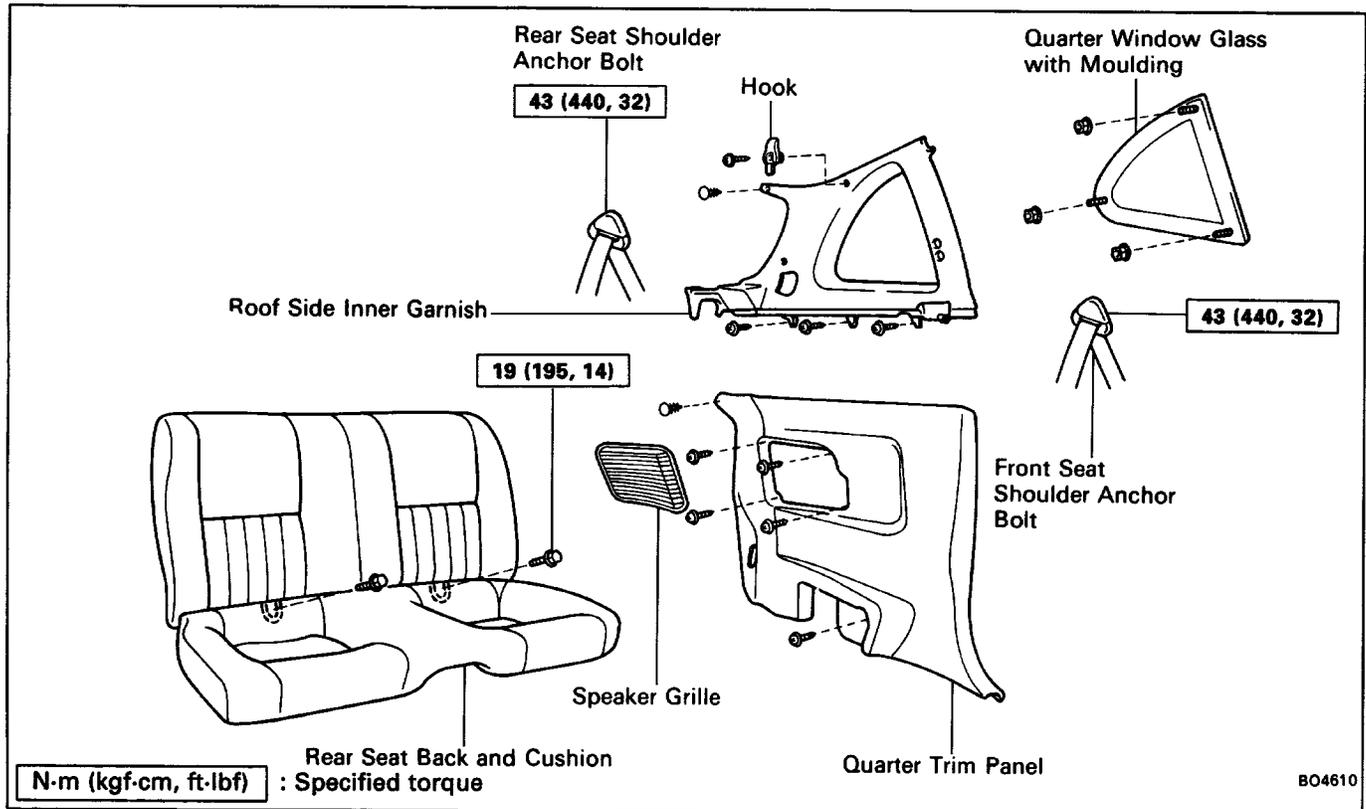
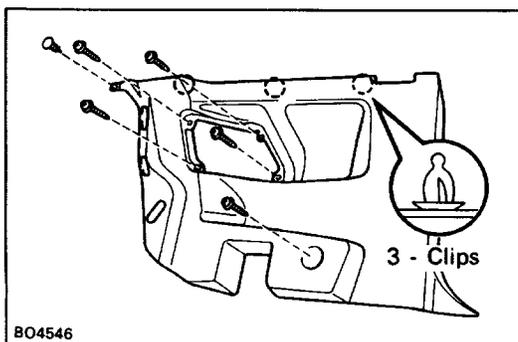


(Coupe)**PREPARE ITEMS LISTED**(See page [BO-38](#))**COMPONENTS****REMOVAL OF QUARTER WINDOW GLASS**


1. REMOVE REAR SIDE OF SCUFF PLATE
2. REMOVE REAR SEAT BACK AND CUSHION
(See page [BO-66](#))

**3. REMOVE QUARTER TRIM PANEL**


- (a) (w/ Separate Seat)
Remove two bolts and rear seat side hinge.
- (b) Using the screwdriver, remove speaker grille.
HINT: Tape the screwdriver tip before use.
- (c) Remove six screws.
- (d) Using the screwdriver, pry loose the clips and remove the quarter trim panel.

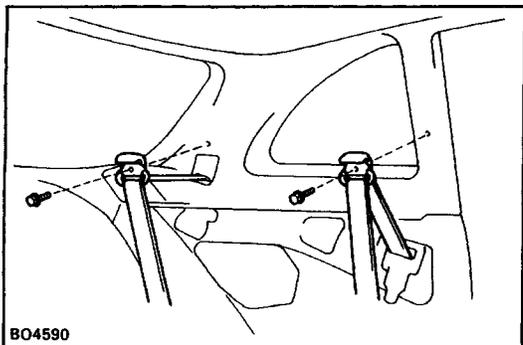


4. REMOVE FRONT SHOULDER BELT ANCHOR BOLT
5. REMOVE REAR SHOULDER BELT ANCHOR BOLT

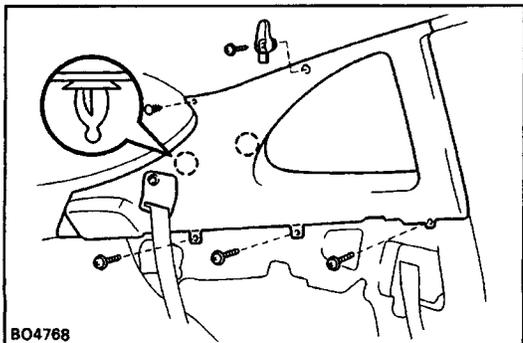

6. REMOVE ROOF SIDE INNER GARNISH
 - (a) Remove the screw and the hook.
 - (b) Remove the three screws.
 - (c) Using the screwdriver, pry loose the clips.
 - (d) Remove the roof side inner garnish.

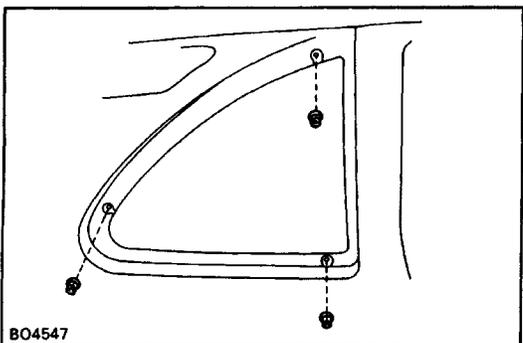

7. REMOVE QUARTER WINDOW GLASS AND MOULDING
 - (a) Remove three nuts.

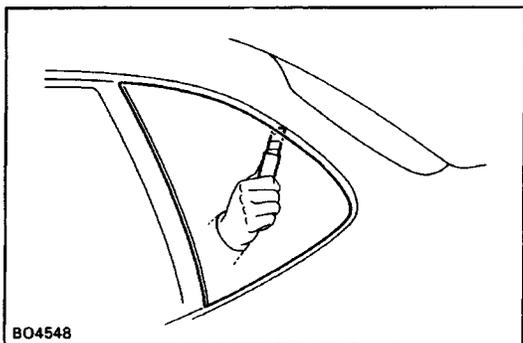


- (b) Using a knife, cut loose the adhesive.
 - (c) Remove the glass.
- NOTICE: Do not damage the body.**

INSTALLATION OF QUARTER WINDOW GLASS


(See page [BO-42](#))

1. CLEAN BODY OR GLASS

Wipe off any adhesive left on the body or moulding with cleaner.

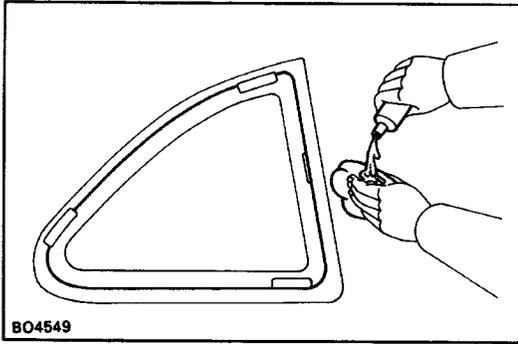

BO4549

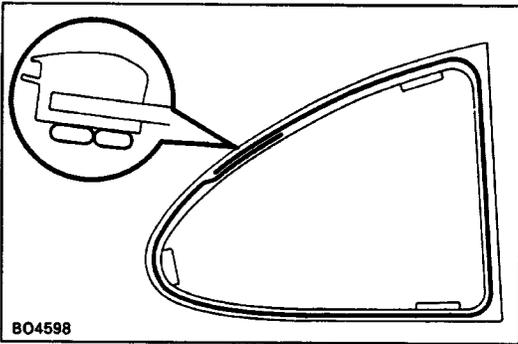

BO4598

2. INSTALL QUARTER WINDOW GLASS

- (a) Using a sponge, apply the primer on the contact surface of moulding.
- (b) Let the primer coating dry for 10 minutes.

- (c) Install the seal to the glass.
- (d) Install the window glass to the body.
- (e) Install three nuts.

3. INSTALL ROOF SIDE INNER GARNISH

4. INSTALL QUARTER TRIM PANEL

5. INSTALL FRONT AND REAR SHOULDER BELT ANCHOR BOLT AND GUIDE

Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)

6. INSTALL REAR SEAT CUSHION AND BACK (See page [BO-66](#))

7. INSTALL SCUFF PLATE