


## RECEIVER

(See page AC-10)

### ON-VEHICLE INSPECTION

**CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE**

Use a gas leak detector. Repair as necessary.

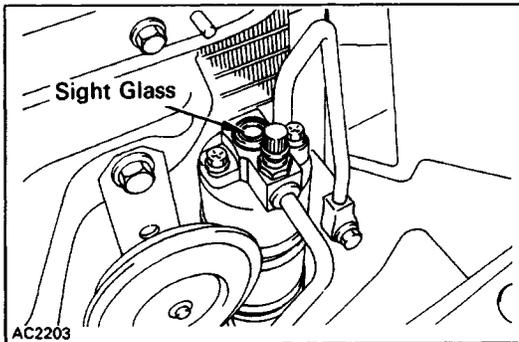

### REMOVAL OF RECEIVER

1. **RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM**
2. **DISCONNECT TWO LIQUID TUBES FROM RECEIVER**  
HINT: Cap the open fittings immediately to keep moisture out of the system.
3. **REMOVE RECEIVER FROM RECEIVER HOLDER**

### INSTALLATION OF RECEIVER

1. **INSTALL RECEIVER IN RECEIVER HOLDER**  
HINT: Do not remove the blind plugs until ready for connection.
2. **CONNECT TWO LIQUID TUBES TO RECEIVER**  
Torque: 13 N-m (135 kgf-cm, 10 ft-lbf)
3. **IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR**  
Add 20 cc (0.7 fl.oz.)  
ND OIL 6,  
SUNISO No. 5GS or equivalent.
4. **EVACUATE AIR FROM AIR CONDITIONING SYSTEM**
5. **CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE**  
Specified amount: 720 ±50 g (25.4 ±1.8 oz)