


HEADLIGHT


CAUTION: When adjusting each section, raise or lower the headlight with the light control switch. But when adjusting each section, be sure to remove the RTR fuse (30A) before adjusting.

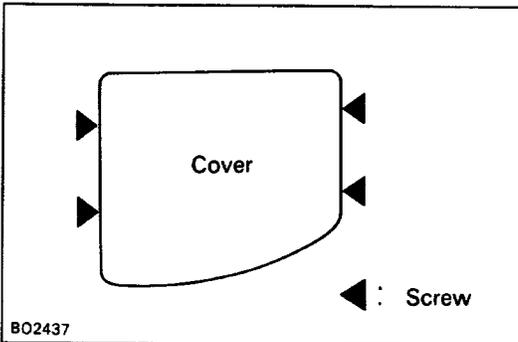

ADJUSTMENT OF HEADLIGHT


1. ADJUST HEADLIGHT COVER IN FORWARD /REARWARD AND LEFT/RIGHT DIRECTIONS

- (a) Remove the headlight door.
- (b) Adjust the headlight cover by loosening the cover set screws.

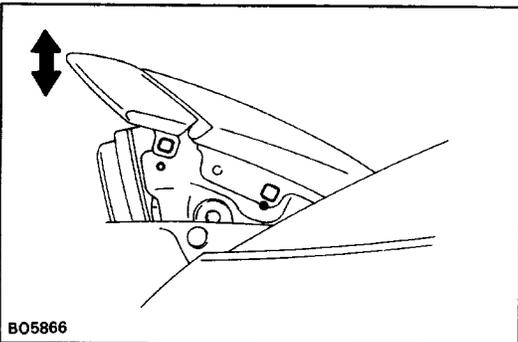

2. ADJUST HEADLIGHT SLANT

- (a) Loosen the four cover set screws.
- (b) Adjust the headlight cover until its top surface is flush with the body.
- (c) Tighten the four cover set screws.

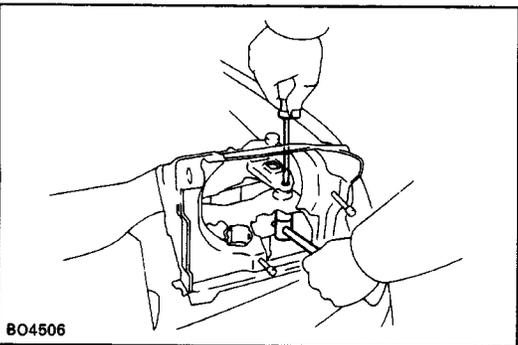

3. ADJUST HEADLIGHT STOPPER POSITION

- (a) Raise the headlight.
- (b) Turn the stopper counterclockwise until it touches the headlight bracket, then turn it another three turn counterclockwise.
- (c) Tighten the stopper lock nut.