



Solenoid Resistor (3S-GTE)

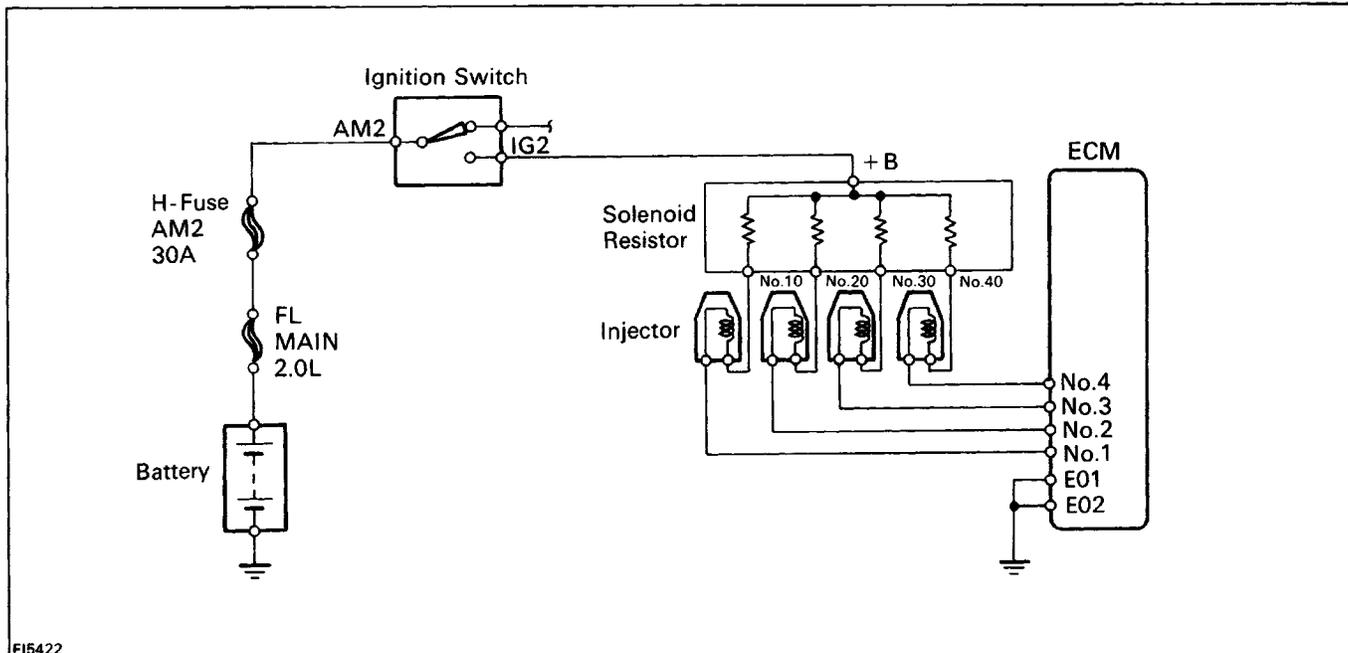

FI5422

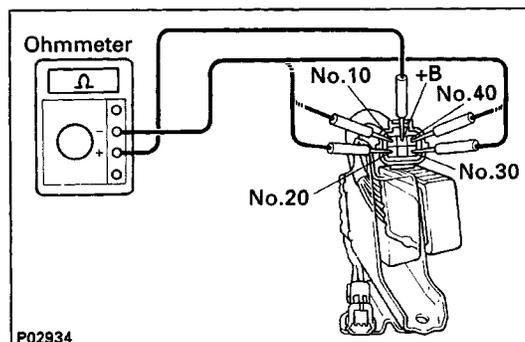

P02934

INSPECTION OF SOLENOID RESISTOR

INSPECT SOLENOID RESISTOR

Using an ohmmeter, measure the resistance between terminal + B and other terminals.

Resistance: 4 – 6Ω

If the resistance is not as specified, replace the resistor.