

## LUGGAGE COMPARTMENT LID ADJUSTMENT OF LUGGAGE COMPARTMENT LID

### 1. ADJUST LID IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

Adjust the lid by loosening the lid side hinge bolts.


### 2. ADJUST LID IN VERTICAL DIRECTION

Adjust the lid by increasing or decreasing the number of the shims.

### 3. ADJUST LOCK

(a) Adjust the lock position by slightly loosening the mounting screws, and hitting the lock with a plastic hammer.



(b) Tighten the mounting screws again.

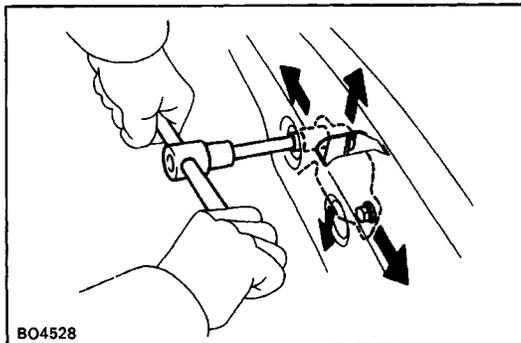

### 4. ADJUST DOOR LOCK STRIKER

(a) Loosen the mounting bolts to adjust the lock striker.

(b) Using a plastic hammer, tap the striker to adjust it.

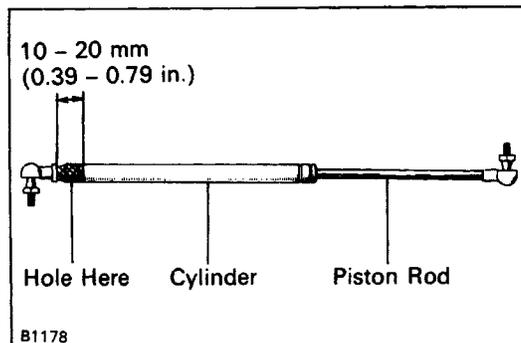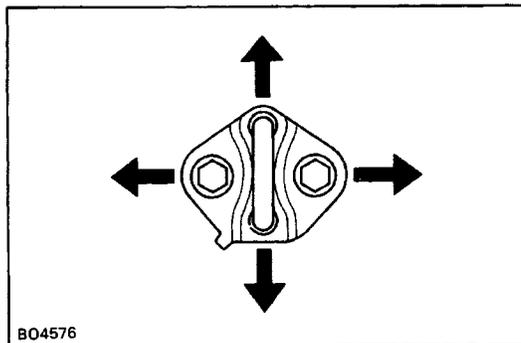

## Luggage Compartment Damper Stay

### NOTICE: Handling the damper.

(a) Do not disassemble the damper because the cylinder is filled with pressurized gas.

(b) If the damper is to be replaced, drill a 2.0- 3.0 mm (0.079 - 0.118 in.) hole in the bottom of the removed damper cylinder to completely release the high-pressure gas before disposing of it.

(c) When drilling, chips may fly out so work carefully.

(d) The gas is colorless, odorless and non-toxic.

(e) When working, handle the damper carefully.

Never score or scratch the exposed part of the

piston rod, and never allow paint or oil to get on it.

(f) Do not turn the piston rod and cylinder with the damper fully extended.