


# VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-01

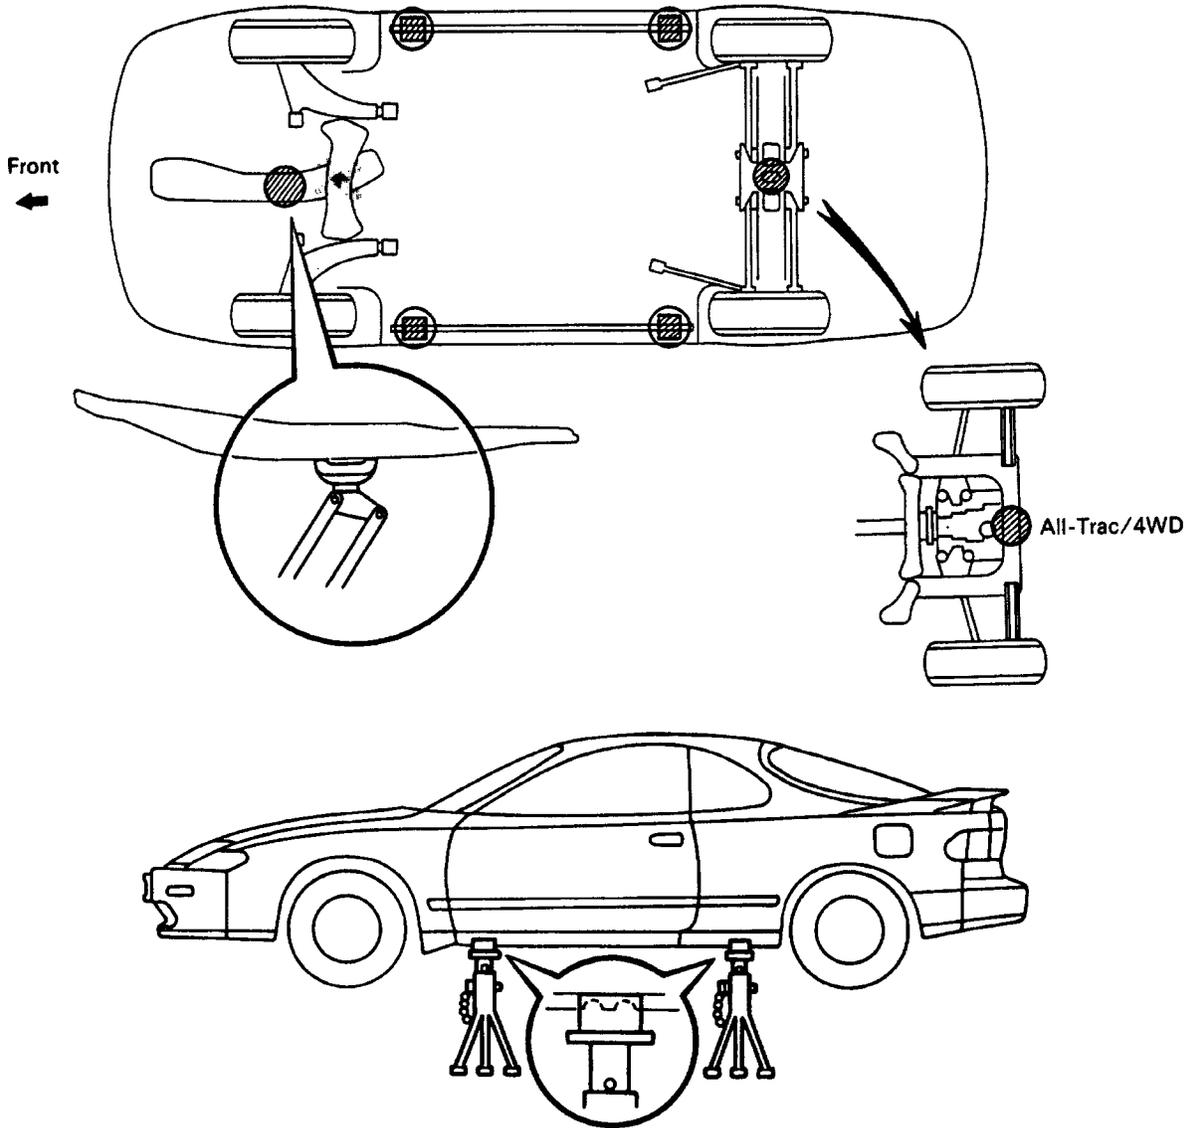

**JACK POSITION**  \_\_\_\_\_  
 Front ..... Center of engine mounting center member  
 Rear ..... Jack up support of rear subframe

**NOTICE:** Place the jack only in the positions indicated above. Never place the jack in the position marked "X" as this will bend the cross-member and damage the vehicle.

**PANTOGRAPH JACK POSITION**  \_\_\_\_\_  
**SUPPORT POSITION**  
 Safety stand and swing arm type lift ..... 