



## Intake Air Temperature Sensor (4A-FE and 5S-FE)

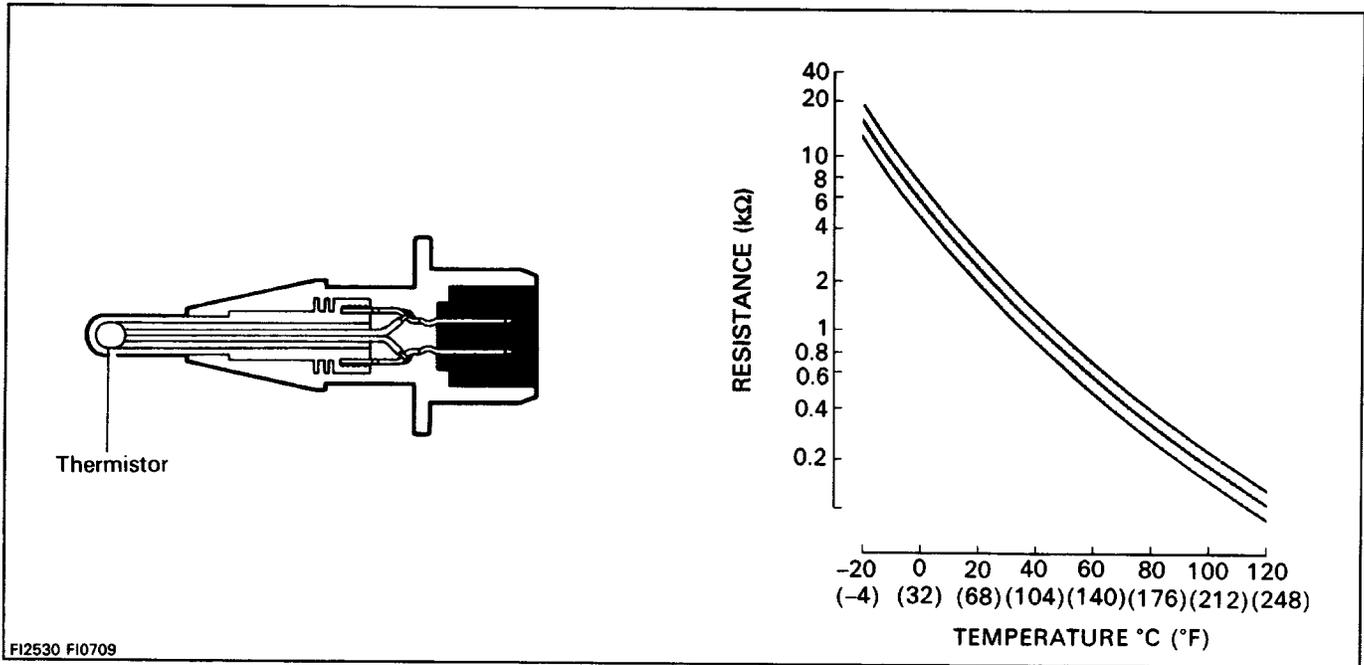

FI2530 FI0709

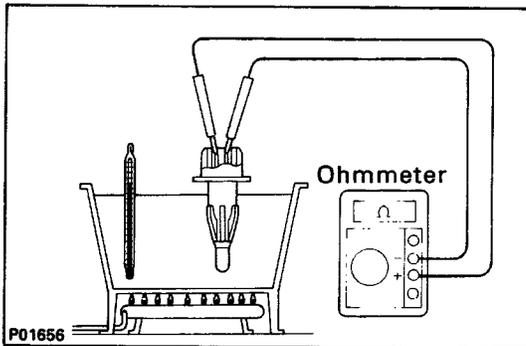

P01656

### INSPECTION OF INTAKE AIR TEMPERATURE SENSOR

#### INSPECT RESISTANCE OF INTAKE AIR TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: Refer to the chart above**

If the resistance is not as specified, replace the sensor.