


## STARTER RELAY (M/T only)


### INSPECTION OF STARTER RELAY

LOCATION: In the right kick panel.

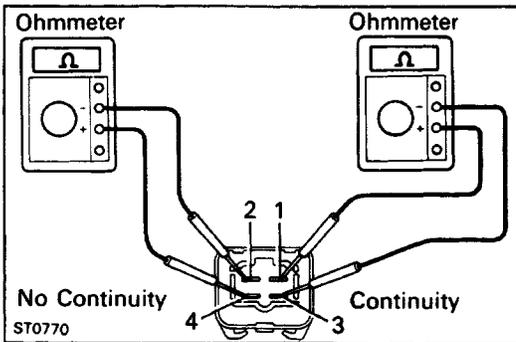

#### 1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
  - Check that there is no continuity between terminals 2 and 4.
- If continuity is not as specified, replace the relay.

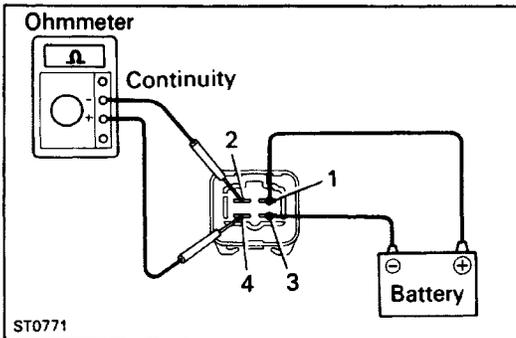

#### 2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
  - Using an ohmmeter, check that there is continuity between terminals 2 and 4.
- If operation is not as specified, replace the relay.

## CLUTCH START SWITCH (M/T only)

(See page [CL-5](#))