
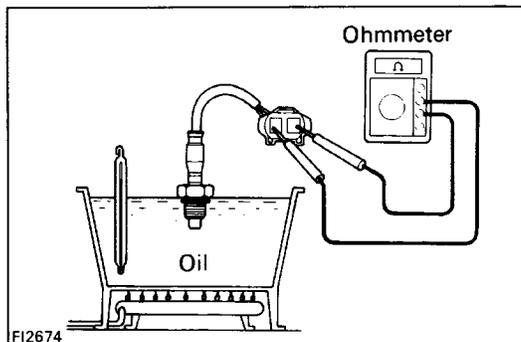


## EGR Gas Temperature Sensor (CALIF. only)

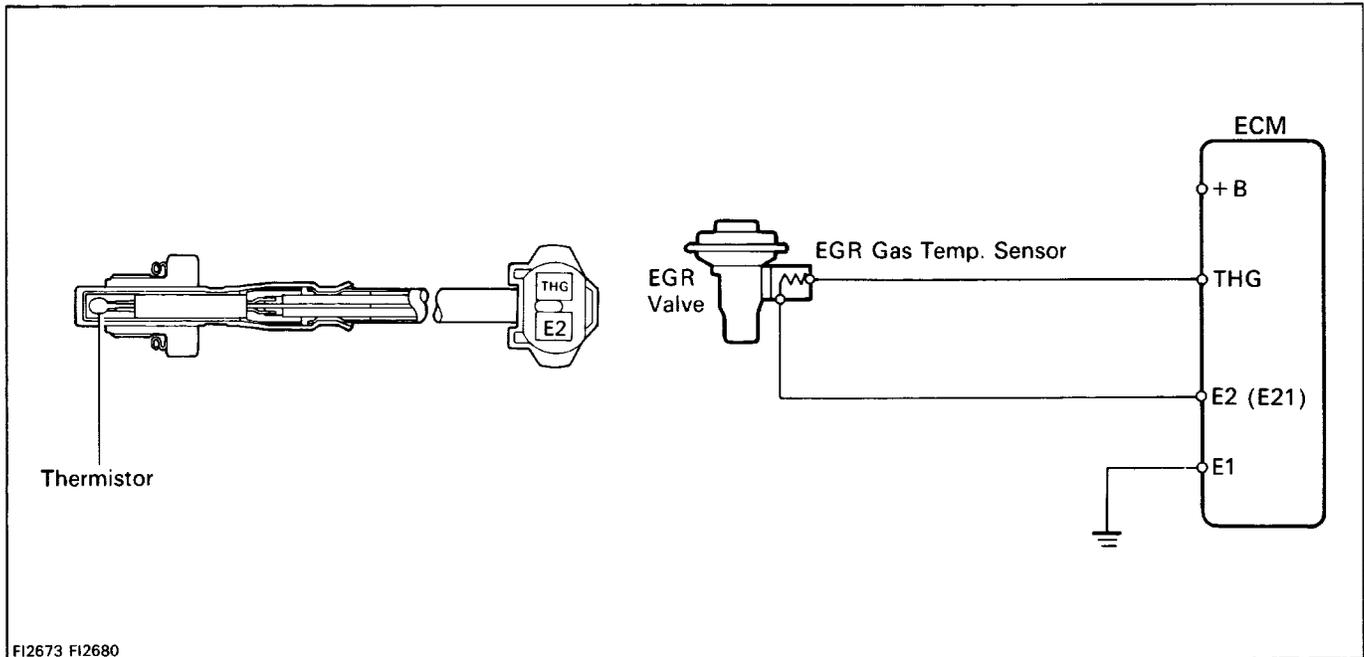

### INSPECTION OF EGR GAS TEMPERATURE SENSOR

#### INSPECT EGR GAS TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

#### Resistance:

69 – 89 k $\Omega$  at 50°C (112°F)

11 – 15 k $\Omega$  at 100°C (212°F)

2 – 4 k $\Omega$  at 150°C (302°F)

If the resistance is not as specified, replace the sensor.