



REMOVAL AND INSTALLATION OF OIL COOLER

REMOVE AND INSTALL OIL COOLER AS SHOWN

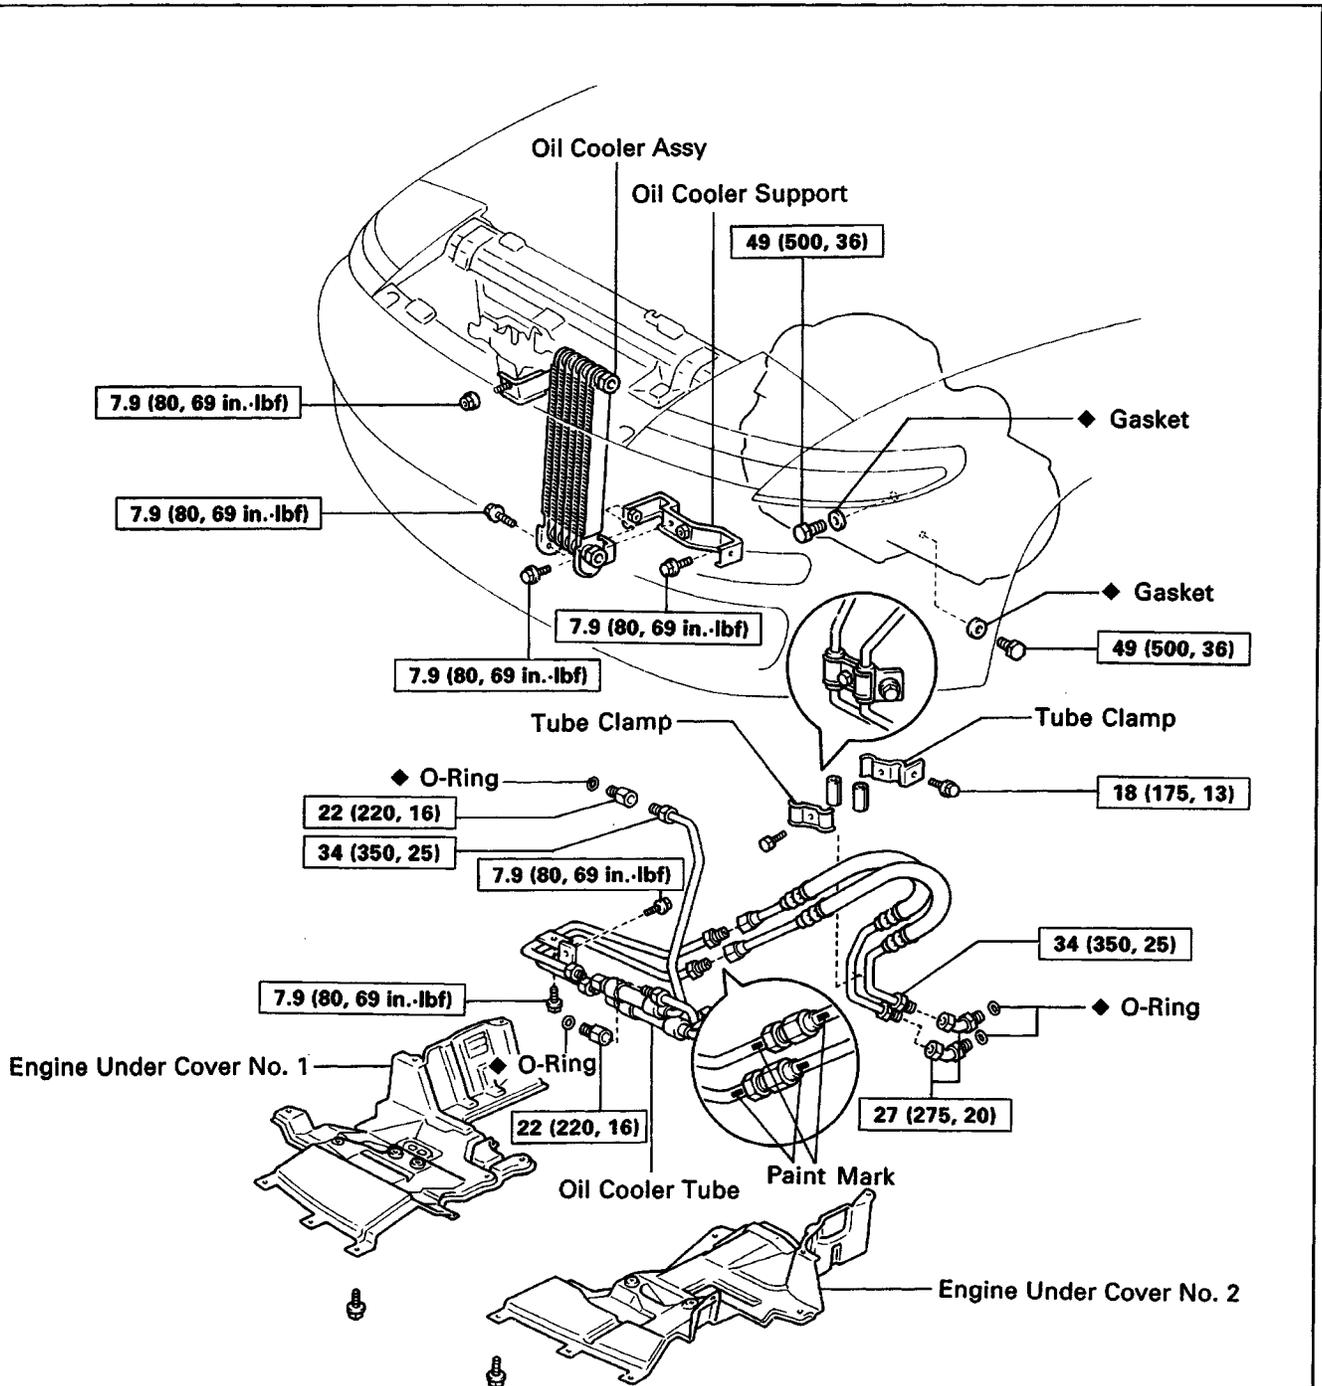


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

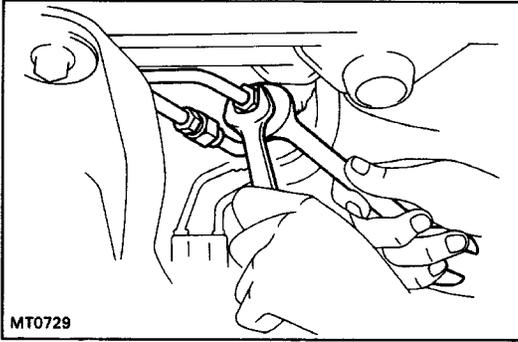


REMOVAL OF OIL COOLER

1. DISCONNECT OIL COOLER TUBE

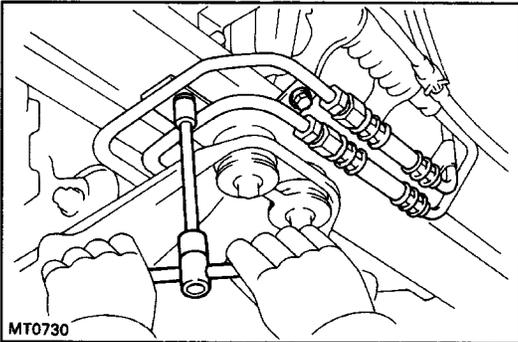


t. REMOVE TUBE SET BOLTS

Remove the two nuts.

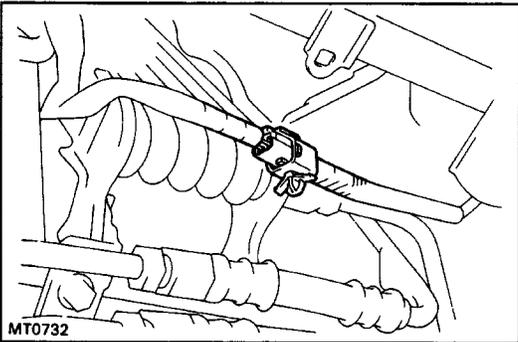


3. DISCONNECT CONNECTOR

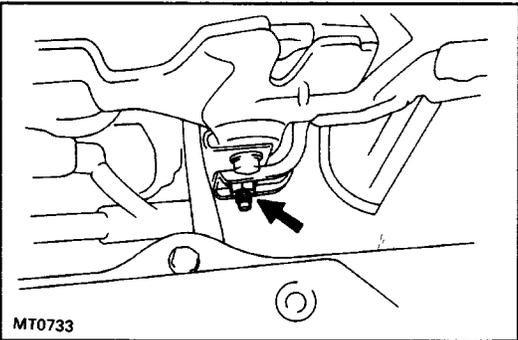


4. REMOVE OIL COOLER SET BOLTS AND NUT

(a) Remove the nut.

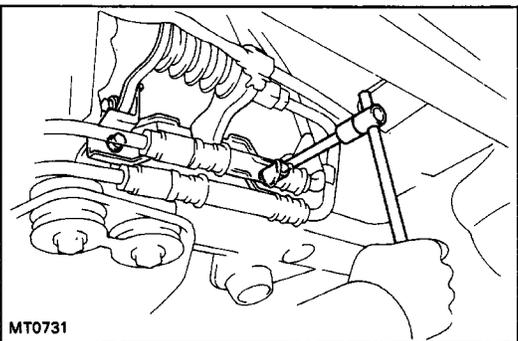


(b) Remove the two bolts.

5. REMOVE OIL COOLER

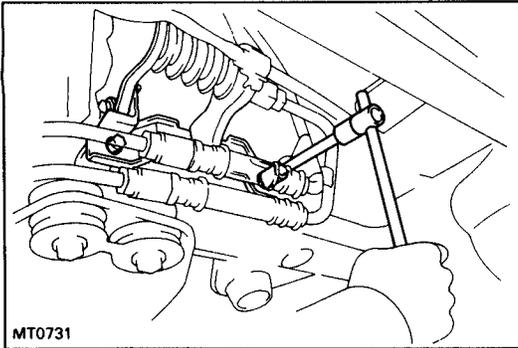


INSTALLATION OF OIL COOLER


1. INSTALL OIL COOLER
2. INSTALL OIL COOLER SET BOLTS AND NUT
 - (a) Install the two bolts.

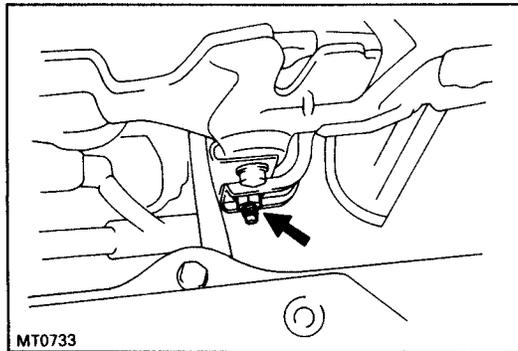

- (b) Install the nut.

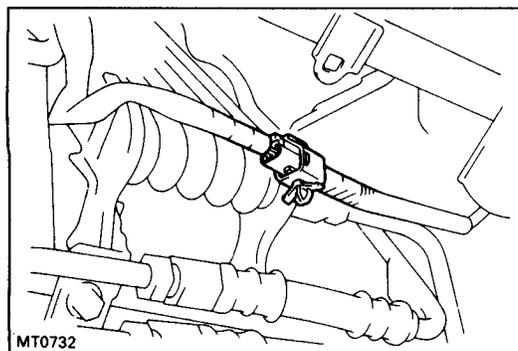


3. CONNECT CONNECTOR

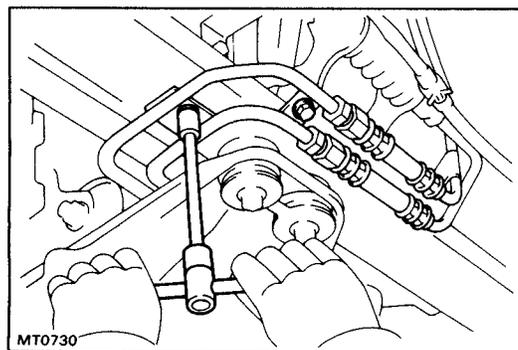

4. INSTALL TUBE SET BOLTS

Install the two bolts.

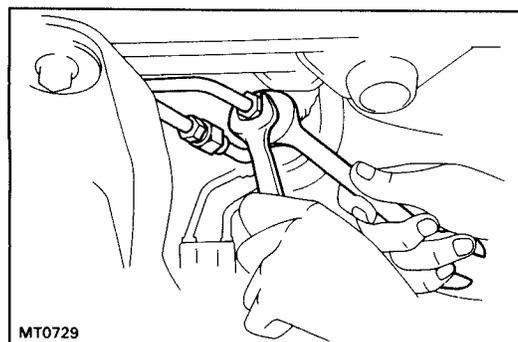

5. CONNECT OIL COOLER TUBE