


BR4937

## Control Relay

### INSPECTION OF CONTROL RELAY

#### INSPECT CONTROL RELAY OPERATION

Inspect the relay continuity between terminals.

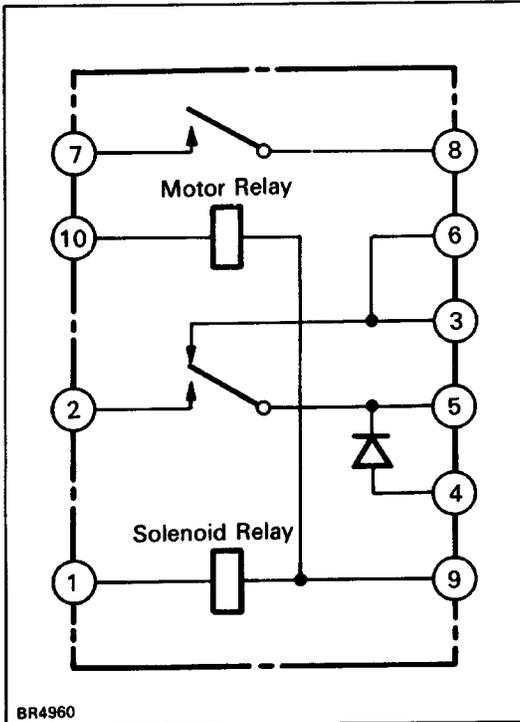

BR4960

Terminal	1	2	3	4	5	6	7	8	9	10
Condition										
Constant			○ ← ○	○ → ○						
Apply battery positive voltage between terminals 9 and 10.								○ ○		
Apply battery positive voltage between terminals 1 and 9.		○ ○		○ × ○						

If operation is not as specified, replace the relay.