

INSPECTION OF CLUTCH START SYSTEM

CHECK CLUTCH PEDAL

1. CHECK THAT PEDAL HEIGHT IS CORRECT

(See page CL-3)

2. CHECK THAT PEDAL FREEPLAY AND PUSH ROD PLAY ARE CORRECT


(See page CL-3)

CHECK CLUTCH START SYSTEM

CHECK CLUTCH START SYSTEM

- Check that the engine does not start when the clutch pedal is released.
- Check that the engine starts when the clutch pedal is fully depressed.

If necessary, adjust or replace the clutch start switch.

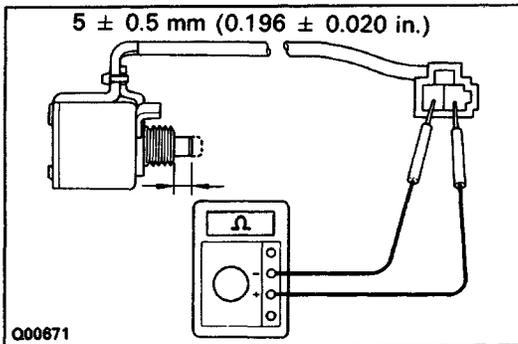

INSPECTION OF CLUTCH START SWITCH

INSPECT CONTINUITY OF CLUTCH START SWITCH

- Check that there is continuity between terminals when the switch is ON (pushed).
- Check that there is no continuity between terminals when the switch is OFF (free).

If continuity is not as specified, replace the switch.